

3 1 9 0 - 6 2 8 4


EZ-240-NMH-75-X
3190-6284

**Type N Male (Plug) Straight Non-Solder
Pin No Braid Trim Connector
for LMR-240-75 Cable**

YYWW


Made in China

Installation Instruction

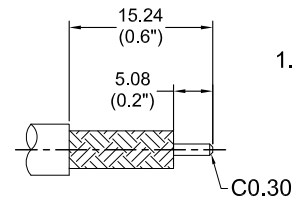


Dimensions in millimeters


1. A. Cut the cable squarely while keeping it round using the CCT-02 cutting tool
B. Trim cable to the dimensions shown using the CST-240A prep tool
C. Remove any residual plastic from the center conductor
D. Deburr center conductor using the CST-240A or a fine file

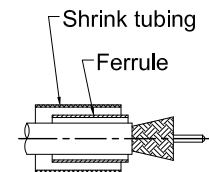

2. A. Slide the ferrule and shrink tubing over the cable
B. Flare the braid



3. A. Insert cable into connector body until dielectric is seated and center conductor is inserted fully into connector contact pin

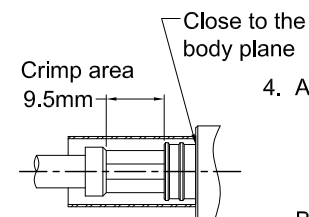

4. A. Slide the ferrule over braid and crimp as close to body as possible using .255" HEX crimp tooling. Pay attention to the crimp area, do not crimp rear of crimp sleeve
B. Heat shrink tube over rear of connector body and down on to cable jacket using hot air gun

Refer to www.timesmicrowave.com for install videos