


3 1 9 0 - 6 3 1 6

**EZ-240-NF-BH-X**  
**3190-6316**

**Type N Female (Jack) Straight  
Non-Solder Pin No Braid Trim Connector  
for LMR-240 Cable**


Made in China

## Installation Instruction

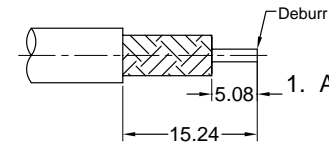


Dimensions in millimeters


1. A. Trim cable to dimensions shown using the CST-240 prep tool. Be careful to avoid nicking the braid  
B. Remove any residual plastic from center conductor

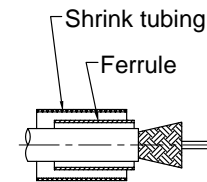

2. A. Slide the ferrule and shrink tubing over the cable  
B. Flare the braid



3. A. Insert cable into connector body until dielectric is seated and center conductor is inserted fully into connector contact pin

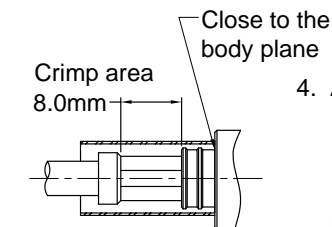

4. A. Slide the ferrule over braid and crimp as close to body as possible using .256" HEX crimp tooling. Pay attention to the crimp area, do not crimp rear of crimp sleeve  
B. Heat shrink tube over rear of connector body and down on to cable jacket using hot air gun

Refer to [www.timesmicrowave.com](http://www.timesmicrowave.com) for install videos