




EZ-240-TM-RP-PL-X
3190-6404





RP TNC Male(Plug) Straight
Non-SolderPin No Braid Trim
Connector for LMR-240-LLPL Cable
YYWW

Made in China

Installation Instruction

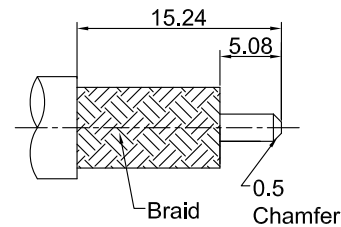

All dimensions in millimeters

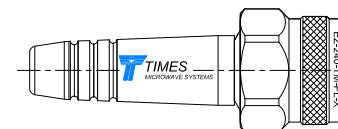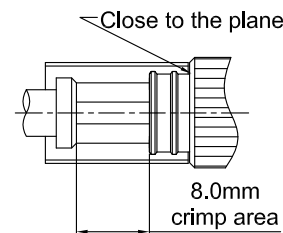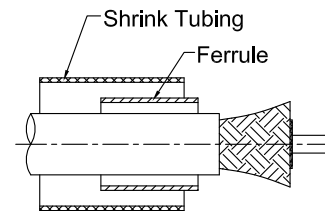

1. A. Cut the cable squarely while keeping it round using the CCT-02 cutting tool.
B. Trim cable to the dimensions shown using the CST-240 prep tool.
C. Remove any residual plastic from the center conductor.
D. Debur center conductor using a fine file.

2. A. Slide crimp ferrule and heat shrink tubing over the cable
B. Flare the braid

3. A. Insert cable into connector body until dielectric is seated and center conductor is inserted fully into connector center pin.

4. A. Slide crimp ferrule over braid and crimp as close to body as possible using .256" HEX crimp tooling. Pay attention to the crimp area, do not crimp rear of crimp sleeve
B. Heat shrink tube over rear of connector body and down on to cable jacket using hot air gun

Times supply rubber boot 3109-400 (WSB-240) as an option to instead of heat shrink tube.

Refer to www.timesmicrowave.com for install videos