TIMES MICROWAVE SYSTEMS

P.O Box 5039

Wallingford, CT 06492-5039 USA Tel. (203) 949-8400 Fax. (203) 949-8423

Connector EIA 7/8" for cable LMR 600 PN 3190-1373

OF 20838

Made in Brazil




Installation Instruction for connectors

EIA 7/8" for cable LMR 600

Recommended tools:

Hacksaw File Wrenches 1" (2)

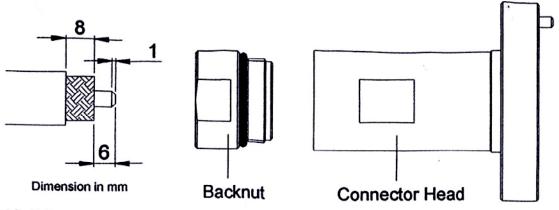

1. Cable Trimming.

- 1.1. Strip cable as shown.
- 1.2. Remove the burr from cable's inner conductor.

2. Connector assembly.

- 2.1. Lubricate the cable with the provided grease.
- 2.2. Slide back nut onto cable.
- 2.3. Open the braid from the center to the outside direction.
- 2.4. Spin the backnut clockwise. Using the open end wrenches, torque the backnut without rotating the connector head to the point the connector doesn't rotate over the cable anymore.

(Important: Push the connector head against the cable and hold it firm while spinning the back nut.)